

Peristaltic Cased Tube Pump

Appendix H Formatting the USB drive

Vantage 5000

Version 1.6v-10/2020 Print-No. 01







Version 1.6v-10/2020 Print-No. 01

Vantage 5000

Trademarks

VERDERFLEX[®] is a registered trademark of Verder International B.V. No permission is granted to use any Verder, trademarks or trade names included in this document without the prior written agreement of Verder International B.V.

Modbus® is a registered trademark of Schneider electric USA, INC.

Tri-clamp® is a registered trademark of Alfa Laval Corporate AB.

Hypalon® is a registered trademark of RSCC Wire & Cable LLC.

Profibus® is a registered trademark of PROFIBUS Nutzerorganisation e.V.





Table of contents

1. Appendix H Formatting the USB drive



Appendix H

1 Formatting the USB drive

The USB formatting procedure is detailed as follows:

- 1. Software can only be updated using a FAT32 formatted USB flash drive. If the drive is already formatted to FAT32, the user can skip to *step 9*.
- To verify if the drive is formatted using FAT32, insert the memory stick into a Windows PC.
- 3. Open the 'Computer' folder and highlight the memory stick.

Note: If using Windows 7, the file system will be displayed as per *Figure 1*. If the file system is not displayed, right-click on the USB drive and select 'Properties'.

- 4. When 'Properties' has been selected the window will be opened as shown in *Figure 2*.
- 5. If the file system is not FAT32, the user will need to format the USB drive.



Formatting will destroy all data!

<u>Do not</u> perform unless you do not need the data on the drive.

- 6. To format, close the properties page.
- 7. Right-click on the drive and select the option marked 'Format'. The window will open as per *Figure 3*.
- 8. Ensure the "File system" reads "FAT32", then the user can press the 'Start' button.
- 9. Once formatting is complete, copy the firmware file to the root path on the drive.

Note

If the USB drive is added as drive 'G', the firmware path would be '*G*:*Jupiter.bin*'.

- Make sure firmware file is named 'Jupiter.bin'. Any other name will result in the pump not updating (e.g 'Jupiter.bin. bin').
- 11. Safely remove USB stick from computer.

Organize 🕶 AutoPlay Eject	Properties System prop	erties Uninstall or c	hange a program 🛛 » 📲 👻	
	Hard Disk D Local In Galaxy	rives (3) Diak (C:) 3 free of 274 GB COVERY (G:) 8 free of 21.1 GB Removable Storag vable Diak (D:) 8 free of 7.60 GB	HP. TOOLS (E) 136 GB free of 1.38 GB (2) DVD RW Drive (F)	
▷ ▲ Local Disk (C:) ▷ → Removable Disk (D:) ▷ → HP_TOOLS (E:) ▷ → HP_RECOVERY (G:)				

Figure 1 'Computer' Folder Opened

vable Di: 2 74 7,42	sk 10,253,69	6 hvtes		
vable Di: 2 74 7,42	sk 10,253,69	6 hvtes		
74	10,253,69	6 bytes	- 70	
7,42		740,253,696 bytes		
7,421,861,888 bytes			6.9	91 GB
8,16	52,115,58	4 bytes	7.6	50 GB
	Drive D:			
		0K	B, 162, 115, 564 byrtes Drive D: OK Cancel	B, 102, 115, 594 bytes 7, 4 Drive D:

Figure 2 Properties of the USB Drive

ormat Removable Disk (D:)	Ж
Capacity:	
7.61 GB	•
File system	
FAT32 (Default)	•
Allocation unit size	
4096 bytes	•
Volume label	
Ouick Format	
Create an MS-DOS startup disk	
Start Close	

Figure 3 Format the USB Drive