


Any questions? You may still have questions and/or comments after reading this brochure. Please feel free to contact us on +44 (0)1924 221 020. You can also respond via email to info@verderflex.com. For more information about Verderflex<sup>®</sup> please visit our website **www.verderflex.com** 

Industrial Peristaltic Pumps

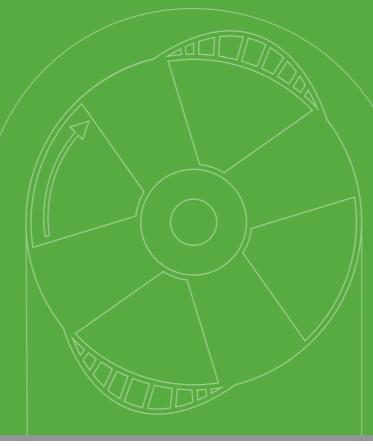

**Verderflex**<sup>®</sup> The Green

#### VERDERFLEX

VERDER**FLEX**®

3 California Drive, Castleford United Kingdom

TEL + 44 (0) 1924 221 020 AT Wien BE Aartselaar BG Sofia CH Basel CN Shanghai CZ Praha FAX + 44 (0) 1132 465 649 DE Haan DK Rødovre FR Eragny s/Oise GB Castleford HU Budapest West Yorkshire, WF10 5QH MAIL info@verderflex.com IN Pune NL Groningen/Vleuten PL Katowice RO Bucuresti/Sibiu WEB www.verderflex.com SK Bratislava TH Bangkok US Macon (GA) ZA Northriding



**Peristaltic Pumps** 



### Verderflex<sup>®</sup> Industrial Peristaltic Pumps

#### Why use peristaltic pumps?

Peristaltic pumps are excellent problem solving pumps and offer the following benefits:

- Abrasion Resistant
- $\hfill \searrow$  No moving parts in the liquid stream
- → Accurate Dosing
- → Self Priming
- → Can pump liquids containing up to 80%
  inorganic solids (fines)
- → Aseptic pumping smooth liquid passage
- → Easy and completely cleanable without disassembly
- → Suitable for handling shear sensitive products



#### Application areas

The unique design of Verderflex<sup>®</sup> peristaltic pumps make them ideally suited to a wide range of application areas, including:

#### Abrasive fluids

Lime mixing, Kieselguhr, circulation and dosing

#### Corrosive fluids

Ferric Chloride, Copper Sulphate and similar Activators, process chemicals, Acids, including Alkalis

#### Shear sensitive fluids

Coagulants, Flocculants and bacterial remediation treatments

#### Mining Industry

Dosing Process Reagents, Thickener Underflow, polymers and slurry transfer

#### Water Treatment

Dosing Lime, Hypochlorite, Silicate, Polymer, Ferric Chloride, sludge transfer and filter press feeds

## We put our heart into pumps

A well-functioning pump helps you succeed. That applies certainly to the most important pump in life, the human heart, but the same goes for pumps in business. In our transparent Verder organization all energy and attention is focused on improving the quality and performance of our pumps and our service. We do so with energy, dedication and - most importantly - with our heart.

#### **VERDER – PASSION FOR PUMPS**

- 🗻 Can run dry
- → Low cost of ownership
- → High suction capability of up to 95% vacuum or a 9.5 mWc
- 🔺 No seals
- Reversible rotation, empties line or blockages
- Can pump abrasive, very viscous or high density fluids

#### Chemical Industry

Corrosive Acids, Bases and Hydrocarbons

#### Printing and packaging

Inks (including water based inks), Paints, Dyes and Glue

Battery Filling, Chemical Cleaning, Equipment Sterilising, Seed Coating Biocides, Hydrogen Peroxide, Sodium Hypochlorite, Caustic Soda

#### Laboratory Systems Biological Broths to polluted streams

Agriculture Feed Additives, Animal Vaccines and Waste Transfer

Paper and Pulp Pulp and Dyes

#### Food and Beverage

Breweries, Diatomaceous Earth, wineries, dairies, sugar refining, abattoirs





### Industrial Peristaltic Pumps

### The Heart Of Your Process


Verderflex<sup>®</sup> industrial peristaltic pumps are extremely robust, ideal for heavy duty operations on continuous or intermittent duty cycles. They are a simple to use, easy to control, versatile and a reliable way to pump liquids.


With maximum flow rates ranging from 1 l/hr to 90 m<sup>3</sup>/hr, there is a Verderflex<sup>®</sup> Industrial pump for most medium to high pressure pumping requirements.


#### Working principle


- 1. The peristaltic pump is based on alternating compression and relaxation of the hose or tube drawing the contents into the hose or tube, operating in a similar way to our throat and intestines.
- A rotating shoe or roller passes along the length of the hose or tube totally compressing it and creating a seal between suction & discharge side of the pump, eliminating product slip.
- 3. Upon restitution of the hose or tube a strong vacuum is formed drawing product into the pump.
- 4. The medium to be pumped does not come into contact with any moving parts and is totally contained within a robust, heavy-duty hose or a precision extruded tube.
- This pumping action makes the pump suitable for accurate dosing applications and has a pressure rating up to 16 bar (hose) and 2 bar (tube).
- 6. The high pressure hose has inner layer of 2-6 reinforcement layers and an outer layer, which allow higher working pressures and generate higher suction lifts than non re-enforced tubing.

#### Quick pump selection

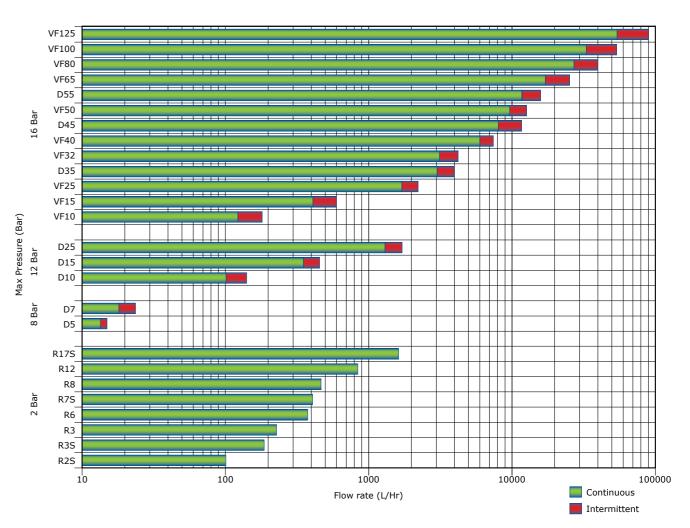

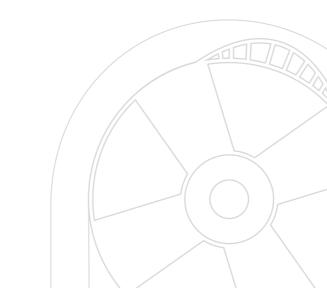

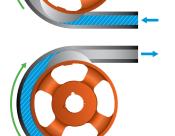

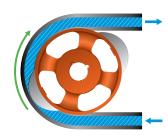





### **Rapide Tube Pumps**

The Verderflex<sup>®</sup> Rapide is a range of industrial tube pumps that provide a balanced selection of simple to operate peristaltic pumps. The family offers the customer pump choices that are compact, are simple to use and require no tools during the tube change.

The range has been developed to offer reliable and cost effective pumping solutions for industrial applications. Standard designs incorporate rugged aluminium pump heads with "thick-walled" tubing for increased suction lift and IP55 gear motors with both single and three phase options.

The Verderflex<sup>®</sup> Rapide is an excellent, low flow dosing pump capable of handling viscous, abrasive and chemically aggressive media with total containment and leak free pumping.

#### 0.25 ml/min - 17 l/min\* up to 2 bar Pressure range \* Tested with Verderprene using water



#### **Rapide Specification**

Standard Speeds	68, 93, 137/140 and 196 rpm depending on model
Control	Inverter optional
Voltage	230/400V 50Hz / 265/460V 60Hz (Single Phrase Available to special order)
Installed Motor Power	0.18kW 50Hz / ¼ HP 60Hz
Standard Tube Material	Verderprene, Silicone

Rapide

Flow rates

#### Advantages of the Rapide **Tube Pump**

- ▲ Compact and easy to use
- → Can be integrated into third party equipment such as printing presses
- → Designed for industrial environments including chemical, mining, printing and water treatment ▲ Can be used with variable
- frequency drives (VFDs)



#### Rapide S

The Rapide 'S' has an easy-fit saddle which allows simple and fast tube changes.

#### The pump head provides:

Flow rates	3 ml/min - 17 l/min per channel*			
Option	flexibility to specify up to 4 channels			
* Tested with Verderprene using water				

60, 113, 151 & 220 rpm
Inverter optional
up to 4 channels (when fa
230/400V 50Hz / 265/46 (Single Phrase Available t
0.37kW 50Hz / ½ HP 60H
Verderprene, Silicone

#### Lightning fast tube change

The easy-fit tube saddle is designed for single handed operation, allowing the tube to be loaded quickly and easily from above, even wearing gloves.





1. Insert the tube on top of the rollers

dowels



3. Open up the lever and fit the claw over



4. Push the lever down to lock the saddle into place the other set of dowels




factory built) 60V 60Hz to special order) Ηz

2. Fit the saddle to one set of

#### Advantages of the Rapide 'S' Tube Pump

- → Easy-fit tube saddle for rapid tube changes
- Manufactured from chemically resistant Polyoxymethylene (POM)
- → Transparent front cover manufactured from Polymethylmethacrylate (PMMA)
- ▲ Pressure range 0-2 bar
- → 3 roller heads
- → When connected the SSD Safety interlock can stop the drive whenever the saddle is opened or removed
- ▲ In-line tube arrangement, providing a kink free liquid path
- → Can be used with variable frequency drives (VFDs)

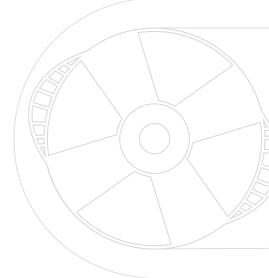

### VERDER**FLEX**® DURA

### Dura Hose Pumps

The Verderflex<sup>®</sup> Dura is the first real advance in hose pump technology since the high pressure hose by combining the compactness of a close coupled pump, with all the benefits of the traditional long coupled pump.

Flow rates	<1 l/hr - 15.3 m³/hr		
Pressure range	up to 8 bar for the D5 to D7		
	up to 12 bar for the D10 to D25		
	and 16 bar for the D35 to D55		



### Advantages of the Verderflex® Dura 5 - 35 Hose Pumps

- → One piece flange design
- Air gap between pump casing and gearbox for zero risk of cross contamination
- → Long coupled design with close coupled advantages
- . ∧ 70% smaller footprint
- → Quick and easy maintenance

#### Advantages of the Verderflex® Dura 45 - 55 Hose Pumps

- → Rotor supported independently of the gearbox
- → Drain channel protects gearbox in case of a hose burst
- Shimmable rotor shoes for precise control of discharge pressure and optimum hose life.
- → Ringfeder slip bush protects against a stalled rotor
- → Fully supported rotor shoes
- → Simple flange assembly reduces hose change downtime

Dura Specification	
Standard Speeds	up to 97 rpm depending on model
Control	Optional inverter
Voltage	220/400V
Frequency	50/60 Hz
Installed Motor Power	0.15 kW to 7.5 kW
Hoses	NR, NBR, EPDM, NBRF**, CSM, Verderprene

\*\* Hose material only available for the D10 to D25

#### The Standard Verderflex<sup>®</sup> Dura Port Flange

- 1 Speeds up hose changes and totally encloses the hose
- 2 Tapered insert section of port flange compresses the hose against the casing for secure hose clamping.
- 3 Cast 316 Stainless Flange
- Universal slotted mating flange, allows connection to DIN PN16, ANSI 150 and JIS 10K


#### **Rotor Locates Over Bearing**


- 1 Shaft seal options: Viton<sup>®</sup> & PTFE
- 2 Rotor mounts directly onto the shaft. Locates over the pair of bearing, minimising overhung load
- **3** Sealed for life bearings are press fitted into the housing

#### Dura 5 - 35 Gearbox Mounting

- 1 Gearbox is totally isolated from pump head - zero possibility of contamination
- 2 Gearbox slides onto shaft and over shaft key
- 3 Long coupled gearbox is free to move, dissipating energy away from pump




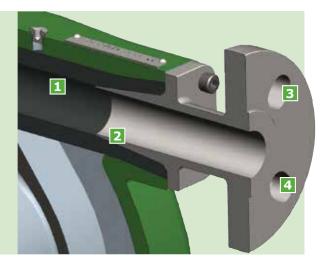

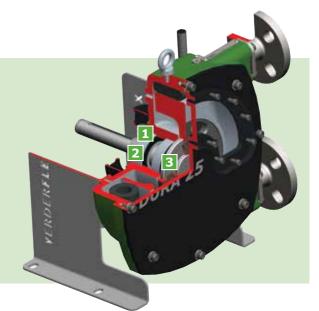





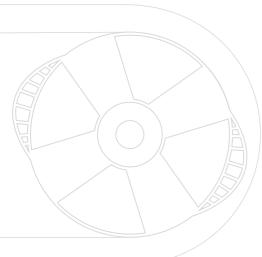

### Industrial Hose Pump

The Verderflex<sup>®</sup> range of industrial hose pumps are a proven high quality family of peristaltic pumping solutions. These pumps reduce downtime, minimise maintenance costs and provide easy to operate and reliable solutions in difficult pumping situations.

Flow rates up to 90 m<sup>3</sup>/hr Operating pressure up to 16 bar




#### Advantages of the Verderflex<sup>®</sup> VF Hose Pump

- → Specially designed hose construction to reduce fatigue, resulting in longer hose service life
- → Disaster proof hose connection for easy maintenance
- → Close coupled drive design
- → Rigid pump housing design for heat dissipation and strength
- Proven Design

VF Specification			
Standard Speeds	up to 87 rpm depending on model		
Control	Optional inverter		
Standard Voltage	220/400V to 7.5 kW, 400/690V above 9.2kW		
Standard Frequency	50/60Hz		
Installed Motor Power	0.12 to 37 kW		
Hoses	NR, NBR, EPDM, CSM & NBRF		

#### The Verderflex<sup>®</sup> VF Port Flange

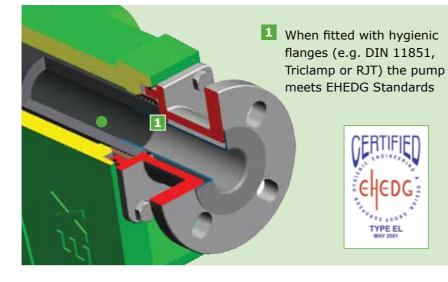



### VERDER**FLEX**®

### Hose and Tube

#### Advancements of the Verderflex<sup>®</sup> hose

The Verderflex<sup>®</sup> hose has more re-enforcements than the competitors and maximises hose life by optimising the fatigue strength. The hose is available in 12 standard hose sizes from 5 mm (3/16") to 125 mm (5"). The surface properties of the hose offer many advantages:

- → Exact wall thickness and outer diameter tolerances are maintained at each and every point
- → No additional process of external machining
- Tested alongside competitors, results indicate that there is no additional friction due to the textured finish surface
- Textured surface creates micropockets of lubrication, promoting more even lubricant coverage, extending hose life

NR	JERDERPHER	White	The most co all market se
NBR	C. TO ENTITE	Yellow	Suitable for oily and fatt
NBRF	300	White/ Yellow	Has a FDA C No. 1935/20 food grade li
EPDM	CONTRACTOR OF	Red	Exceptionally corrosive che
CSM	Carl Street	Green	Used to pum rosive produ
Verder- prene		Beige	Special low p spallation ho for Dura

ommon hose for segments

use with ty products

CFR21 & EC 004 approved liner

ly resistant to nemicals

mp highly coructs

pressure, low nose



#### **VERDERFLEX® TUBE SELECTION**

Verderprene -**General Purpose Tubing** This opaque, cream coloured tube is the most popular choice for tube pumps (FDA & USP compliant).

#### Platinum Cured Silicone -**For Higher Purity** Platinum cured Silicone is a

translucent, odourless tubing with low residuals (FDA & USP compliant).

Other materials including Tygon<sup>®</sup> and Viton<sup>®</sup> are available on request!

# We always have a solution

for your application!



#### Anaerobic Digestion Sludge Transfer Verderflex<sup>®</sup> pumps were specified due to the high suction lift and the sludge's solid content. The pumps transfer sludge to digestion tanks, as part of a biofuel energy plant.



#### **Thickener Underflow Slurry**

On the basis of proven performance, 6 x VF125s pump 60% to 80% solid content, 1.8 SG chrome and platinum slurry at the world's largest Platinum concentrators in South Africa.



## Dosing and Transfer of Refuse Leachate to Incinerators

The Suzhou Waste Incineration Plant have installed 12 Verderflex<sup>®</sup> peristaltic pumps as part of the leachate process and injection system. The abrasive leachate is pumped from the collection reservoir, through an automatic cleaning filter and collected in a draining reservoir.



#### Calcium Hypochlorite Ca(ClO)<sub>2</sub> Dosing

3 x Dura 25 with PP flanges replaced problem vapour locking diaphragm dosing pumps Calcium Hypo diaphragm pumps. Sterilisation of water supply is dependent on Hypochlorite being dosed and this water is then supplied to one of Johannesburg's largest informal settlements.



#### **Copperas Crystal Dosing**

Copperas crystals (solid Ferrous Sulphate FeSO<sub>4</sub>) are mixed at a power station to form a liquid that is re-circulated and dosed by Dura 15 pumps to form a protective iron coating on titanium condensation tubes.




#### Water Based Ink Transfer

A change to water based inks resulted in final product quality issues as the original AODD pumps experienced foaming problems for this printer. Dura 15 pumps are now fitted onto each print line, eliminating bubbles in the ink because of the Dura's gentle pumping action.



#### **Pumping Kieselguhr**

Several Dura 25 pumps dose and transfer Kieselguhr or Diatomaceous Earth in a Bavarian brewery's beer filtration process, filtering 1200 hl of beer every 8-10 hours filtration cycle.

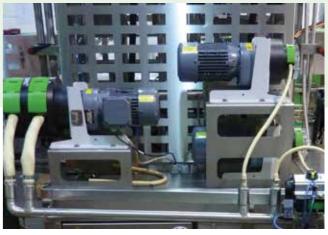

#### **Filling UV Ink Bottles**

A digital photo processing plant commissioned a factory profitability expert to eliminate manual UV ink bottle filling. The concept was approved using stand alone Rapide R3S's & R17S's, leading to purpose designed filling stations each using 4 x 2 channel R17S.



### Contact Verderflex®

If you would like to know more about Verderflex<sup>®</sup> peristaltic pumps then please visit our website www.verderflex.com where you will find the full breakdown of our pump range as well as application stories, latest news and technical datasheets.

Verderflex, Verder Ltd, Unit 3, California Drive, Castleford, WF10 5QH United Kingdom Tel: +44 (0) 1924 221 020 Email: info@verderflex.com

To provide you and experienced independent with the best possible service Verderflex<sup>®</sup> are supported by a distribution network that covers all five continents and is continuing to expand. Our group of distributors includes members of the Verder Group and experienced independent companies. Our worldwide distribution network also help to provide local support and spares availability provide our customers with local support.

You can find your local distributor on our website at www.verderflex.com



