## Verderhus

### HSB-150-100-A



### **Description**

Verderhus screw centrifugal pumps combine the best features of centrifugal and positive displacement pumps. They define a new standard for low head, high flow pumps. The Verderhus pumps have a large clearance screw impeller, which gently feeds product into the pump chamber. This allows the product to be efficiently transferred into the discharge line and allows for large solids to be easily pumped. The screw design impeller is ideal for high solid contents and viscuous liquids. It produces a high efficiency, low NPSHr pump, lowering both energy usage and operational costs, generating a lower overall cost of ownership.

### Features and benefits


- → Large solid handling with <10% sludge, <30% slurry
- → Gentle, low shear pumping, meaning lesser damage to the fluid
- Low energy use compared to other technologies
- Low abrasive wear meaning reduced maintenance costs

#### **Technical data**

Ambient operating temperature	-5, 40 °C
Fluid temperature	-20, 100 °C
Maximum pump noise	up to 75 dB
Max. flows	300 m³/h

Max viscosity	3000 cP
Maximum solid size	80 mm
Solid content percentage	Sludge: 10% - Slurry: 30%
Max. head	22 mwc

### Performance curve

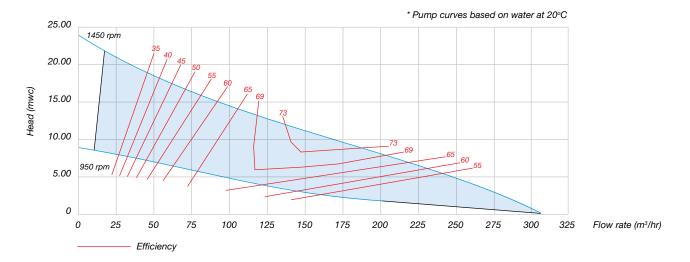

# Verderhus

## HSB-150-100-A



### **Materials**

Description	Material
Impeller housing/Cone	Standard: Cast Iron GG25
	Options: Stainless Steel 1.4408/Tufftride Hardened
Impeller	Standard: Ductile Cast Iron GGG50
	Options: Stainless Steel 1.4408 Tufftride Hardened
Bearing housing	Standard: Cast Iron GG25
Transition flange	Standard: Cast Iron GG25
Drive shaft	Standard: Stainless Steel 1.4021 (AISI 420)
	Options: Stainless Steel 1.4435 (AISI 316L)
Bearing	Standard: Double Row Angular Contact Ball-Sealed for Life
Mechanical seal-product side	Standard: MG1-G4-Silicon Carbide/Silicone Carbide/VITON
Mechanical seal-motor side	Standard: MG1-G4-Carbon/Ceramic/NBR
Mounting frame	Standard: Steel S275 JR
Suction flange	DN150 PN10
Discharge flange	DN100 PN10
Lubricarion options	Standard: RENOLIN CLP GEAL OIL 150
Motor options and overall pump weight	With IEC132 Motor: 228 Kg, With IEC160 Motor: 265 Kg, With IEC180 Motor: 315 Kg,
	With IEC200 Motor: 522 Kg
O-rings material	Standard: Nitrile (NBR)
Paint (pump-motor)	Standard: Two Pack Epoxy Paint-Blue RAL 5012
Paint (mounting frames)	Standard: Powder Coated-Black RAL 7021




Sectional view of Impeller Housing Assembly


## **Verderhus**


HSB-150-100-A



### **Dimensions**

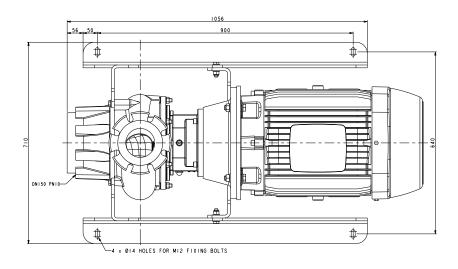

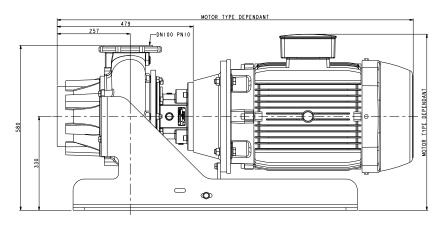

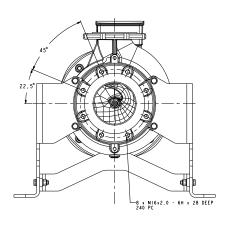

All dimensions are in mm.

All dimensions and weights are for guidance only.



### Find your local supplier at www.verderhus.com

