V E R D E R**HUS**®

Verderhus HSB-150-100-C



Description


Verderhus screw centrifugal pumps combine the best features of centrifugal and positive displacement pumps. They define a new standard for low head, high flow pumps. The Verderhus pumps have a large clearance screw impeller, which gently feeds product into the pump chamber. This allows the product to be efficiently transferred into the discharge line and allows for large solids to be easily pumped. The screw design impeller is ideal for high solid contents and viscuous liquids. It produces a high efficiency, low NPSHr pump, lowering both energy usage and operational costs, generating a lower overall cost of ownership.

Features and benefits

- → Large solid handling with <10% sludge, <30% slurry
- Gentle, low shear pumping, meaning lesser damage to the fluid
- Low energy use compared to other technologies
- Low abrasive wear meaning reduced maintenance costs

Technical data

Ambient operating temperature	-5, 40 °C	Max viscosity	3000 cP
Fluid temperature	-20, 100 °C	Maximum solid size	80 mm
Maximum pump noise	up to 75 dB	Solid content percentage	Sludge: 10% - Slurry: 30%
Max. flows	360 m³/h	Max. head	24 mwc

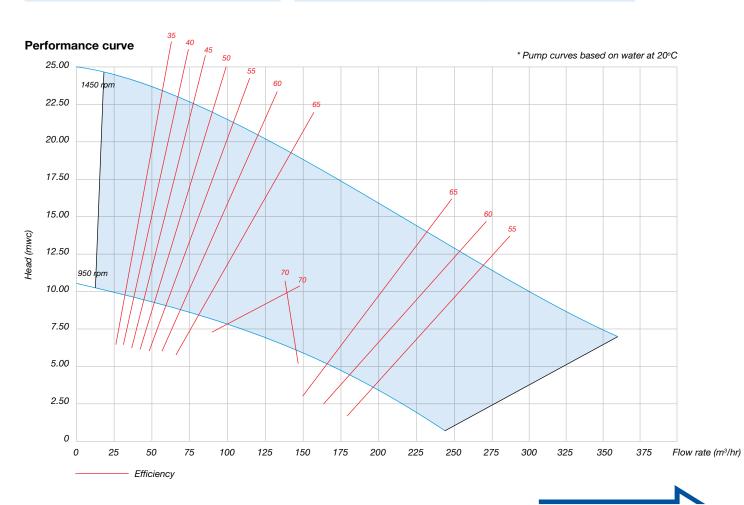

VERDER**HUS**®

Verderhus HSB-150-100-C



Materials


Description	Material		
Impeller housing/Cone	Standard: Cast Iron GG25		
	Options: Stainless Steel 1.4408/Tufftride Hardened		
Impeller	Standard: Ductile Cast Iron GGG50		
	Options: Stainless Steel 1.4408 Tufftride Hardened		
Bearing housing	Standard: Cast Iron GG25		
Transition flange	Standard: Cast Iron GG25		
Drive shaft	Standard: Stainless Steel 1.4021 (AISI 420)		
	Options: Stainless Steel 1.4435 (AISI 316L)		
Bearing	Standard: Double Row Angular Contact Ball-Sealed for Life		
Mechanical seal-product side	Standard: MG1-G4-Silicon Carbide/Silicone Carbide/VITON		
Mechanical seal-motor side	Standard: MG1-G4-Carbon/Ceramic/NBR		
Mounting frame	Standard: Steel S275 JR		
Suction flange	DN150 PN10		
Discharge flange	DN100 PN10		
Lubricarion options	Standard: RENOLIN CLP GEAL OIL 150		
Motor options and overall pump weight	With IEC132 Motor: 228 Kg, With IEC160 Motor: 265 Kg, With IEC180 Motor: 315 Kg, With IEC200 Motor: 522 Kg		
O-rings material	Standard: Nitrile (NBR)		
Paint (pump-motor)	Standard: Two Pack Epoxy Paint-Blue RAL 5012		
Paint (mounting frames)	Standard: Powder Coated-Black RAL 7021		





Sectional view of Impeller Housing Assembly

Verderhus HSB-150-100-C

Dimensions

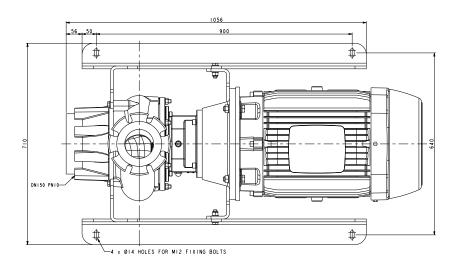

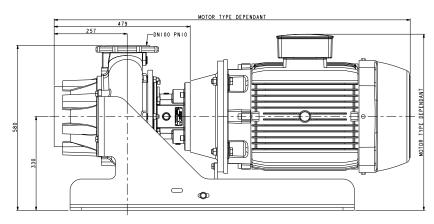

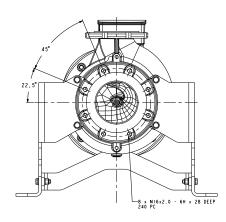

All dimensions are in mm.

All dimensions and weights are for guidance only.



Find your local supplier at www.verderhus.com

VERDER passion for pumps

VERDERHUS®

For construction, installation and floor mounting drawings please contact your local authorised Verderhus® distributor.