HSB-80-50-A



Description

Verderhus stainless steel screw centrifugal pumps combine the best features of centrifugal and positive displacement pumps. They define a new standard for low head, high flow pumps. The Verderhus pumps have a large clearance screw impeller, which gently feeds product into the pump chamber. This allows the product to be efficiently transferred into the discharge line and allows for large solids to be easily pumped. The screw design impeller is ideal for high solid contents and viscuous liquids. It produces a high efficiency, low NPSHr pump, lowering both energy usage and operational costs, generating a lower overall cost of ownership.

Features and benefits

- → Large solid handling with <10% sludge, <30% slurry
- → Gentle, low shear pumping, meaning lesser damage to the fluid
- Low energy use compared to other technologies
- Low abrasive wear meaning reduced maintenance costs
- Corrosion resistant stainless steel for aggressive chemical handling

Technical data

Ambient operating temperature	-5 to 40 °C
Fluid temperature	-20 to 100 °C
Maximum pump noise	up to 68 dB
Max. flows	53 m³/h

Max viscosity	3000 cP
Maximum solid size	40 mm
Solid content percentage	sludge: 10% - slurry: 30%
Max. head	23 mwc



HSB-80-50-A


Performance curve

 Pump Type
 80-50 A

 Speed
 2900

Test Standard ISO 9906 (class 2B)



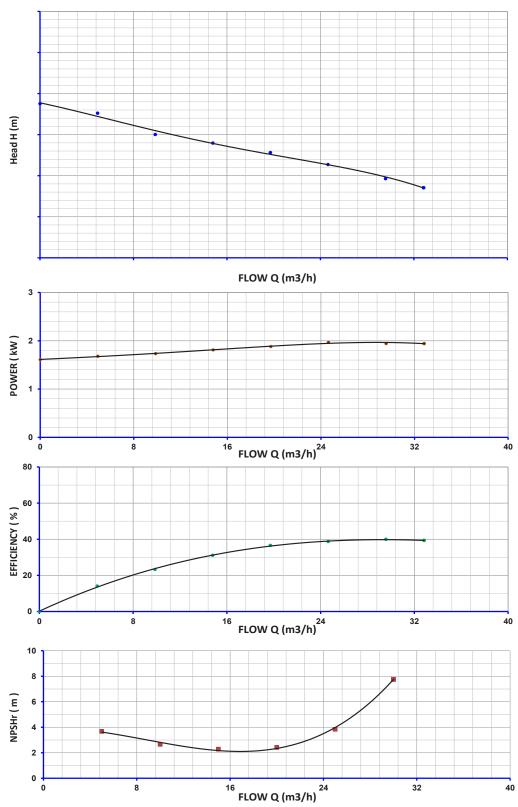


HSB-80-50-A



Item No.	Description	Standard Materials / Dimensions
1	Impeller housing/Cone*	Stainless Steel 1.4408 (316) (Nitrided)
	Suction flange	DN50 PN10
	Discharge flange	G2" BSPP
2	Intake Socket*	Stainless Steel 1.4408 (316) (Nitrided)
3	Impeller*	Stainless Steel 1.4408 (316) (Nitrided)
4	Bearing housing*	Stainless Steel 1.4408 (316) (Nitrided)
5	Transition flange	Stainless Steel 1.4408 (316)
6	Drive shaft	Stainless Steel 1.4435 (AISI 316L)
7	Bearing	Single Row Deep Groove Ball Race-Sealed for Life
8	Mechanical seal-product side	Silicon Carbide/Silicon C¹arbide/VITON
9	Mechanical seal-motor side	Carbon/Ceramic/NBR
10	Oil Chamber	Industrial gear oil 150
11	O-rings material	FPM
12	Motor options and overall pump weight (WEG W22 IE3 motors)	With IEC80 Motor: 39 Kg With IEC90 Motor: 47 Kg With IEC100 Motor: 54 Kg With IEC112 Motor: 77 Kg
	Mounting frame	Steel S275 JR

^{*} Impeller housing, Intake socket, Impellers and Bearing housing will now be Nitrided as standard to increase wear resistance and surface hardness.

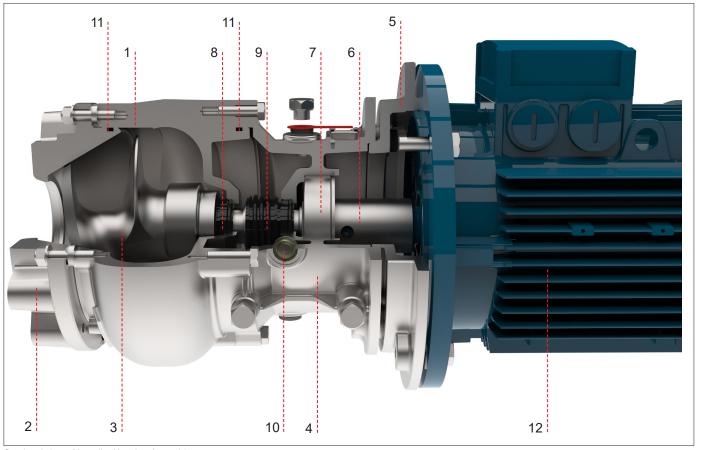


Sectional view of Impeller Housing Assembly




HSB-80-50-A



Dimensions

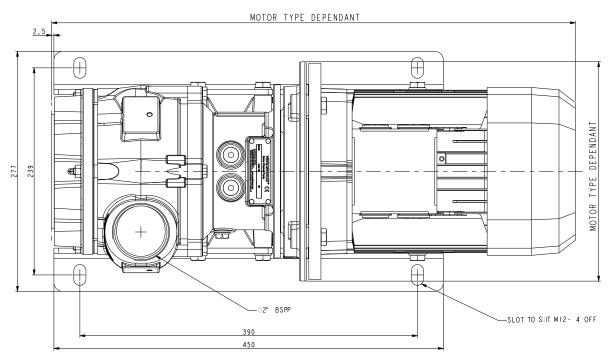

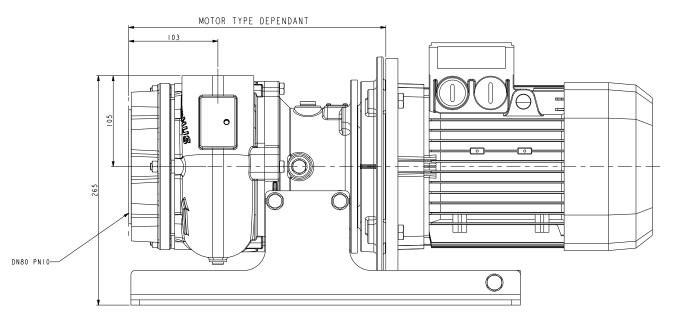

All dimensions are in mm.

All dimensions and weights are for guidance only.



