

JEC

Wine pump JRZW



Description

ZW series are specially designed for red wine making process in order to provide the top quality wine and the best efficiency for wine maker. Since Rotors of ZW series are made of PE, pumps are safe from galling by grape skins, seeds and stems.

Heli-lobe rotors are standard, optionally bi-lobe. Standard stainless steel gear box made from precision casting offers paint free, rust free and long last durability and therefore yields high lifetime value.


Your benefits

- Rotors made of PE. They prevent blockages caused by grape skins, seeds or stems
- Pulsation-free heli-lobe rotor
- Gentle andling of shear-sensitive media
- Simple, maintenance free construction
- Optionally with seals accessible from the front

Technical details

Max. flow	250 l/min	Max. viscosity	100.000 mPas
Max. pressure	6 bar	Temperature range	-5 bis up to 120 °C
Max. rotation speed	1000 rpm	Surface finish	Ra 0,6 µm
Connections	DIN, ISO, Tri-Clamp, SMS, RJT, Flange	Certificats	3A, FDA, EC 1935/2004, ATEX


Flow curve

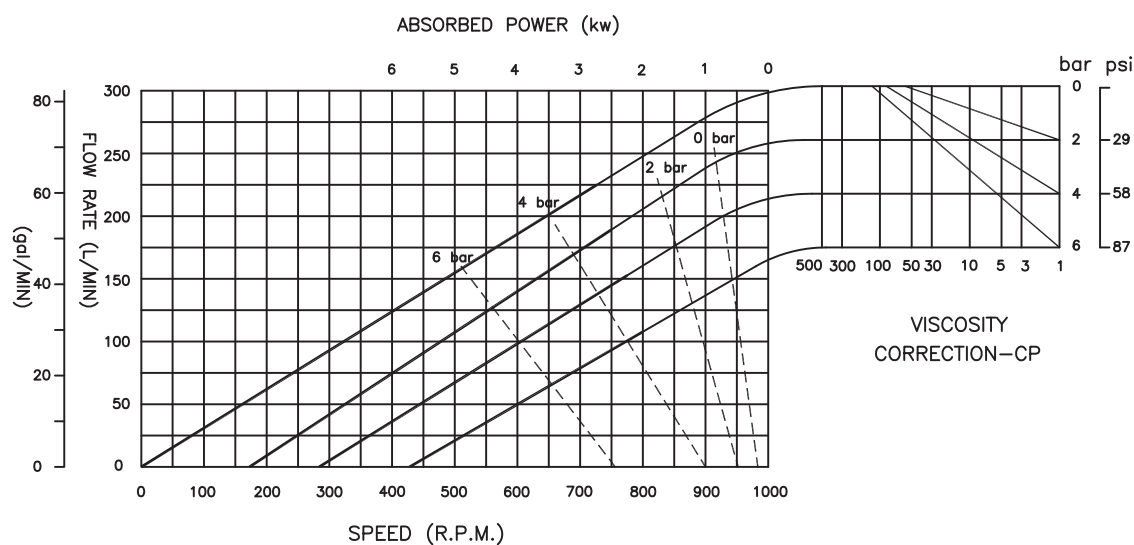

JEC

Wine pump JRZW

Dimensions

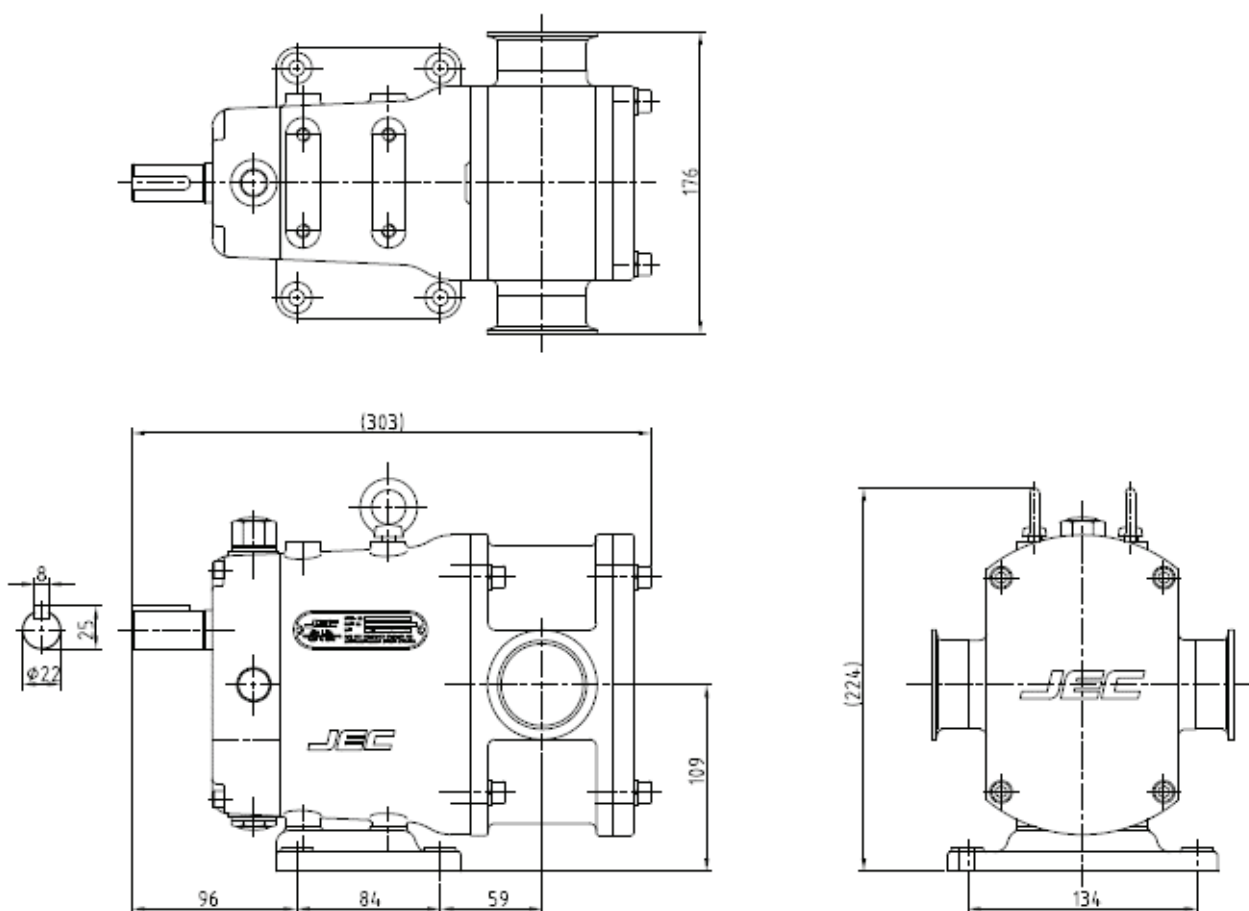

All dimensions in mm (dimensions are approx. values)

Find your local supplier at www.verderliquids.com

For construction, installation and floor mounting drawings please contact your local authorised distributor.

VERDER
passion for pumps

