

ME1-pH solenoid dosing pump



Description

The ME1-pH is a proportional dosing pump, digital adjustable, with built in pH controller. The ME1-pH pump is excellent for the pH control in water treatment but also for swimming pools. Available as wall mounted pump or on foot.

Features

- Automatic recognition of the efficiency of the pH probe.
- Suitable for dispensing products pH+ and pH- (acidic and basic) from software
- Programmable in the entire range of pH 0 14
- Proportional range setting
- PP pump head
- · Manual bleed valve
- Protection class IP 65

Optional

- PVDF head
- Level probe input
- Schuko Plug
- On/Off switch
- · Built in overdose alarm
- · Dosing enabling

Technical data

Standard	Flo	w Max	Pressure	Pulses	Power	Weight	Solenoid diameter
	[l/h]	[cc]	[bar]	[ppm]	[W]	[kg]	[mm]
1.5-12	1.5	0.14	12	180	50	3.5	80
02-11	2	0.18	11	180	50	3.5	80
04-09	4	0.37	9	180	50	3.5	80
05-08	5	0.46	8	180	50	3.5	80
07-05	7	0.65	5	180	50	3.5	80
08-04	8	0.74	4	180	50	3.5	80
10-02	10	0.92	2	180	50	3.5	80
15-0.5	15	1.39	0.5	180	50	3.5	80

Materials


	Standard material	Optional material
Pump head	PP	PVDF
Balls	Pyrex	Ceramics, PTFE, SS 316
Diaphragm	PTFE	-
Fittings	PP 1/2"	PVDF 1/2"
Seals	FPM	EPDM
Valve cartridges	PP 4 x 6	PVDF 4 x 6
Foot filter	PP 4 x 6 lip valve	PVDF 4 x 6 ball valve
Injection valve	PP 4 x 6 ball valve	PVDF 4 x 6 ball valve
Suction tube	PVC 4 x 6	PVDF
Delivery tube	PE 4 x 6	PVDF



ME1-pH solenoid dosing pump



Performance curve

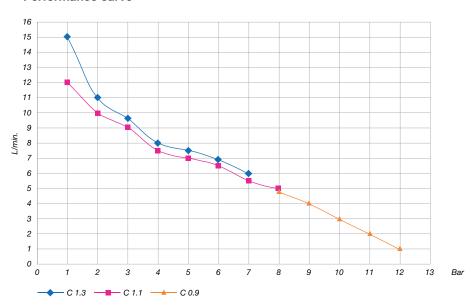


All dimensions are in mm. All dimensions and weights are for guidance only.




ME1-pH solenoid dosing pump



Dimensions

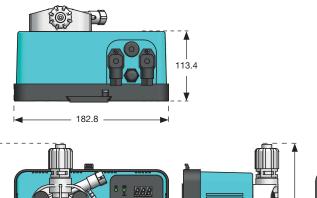

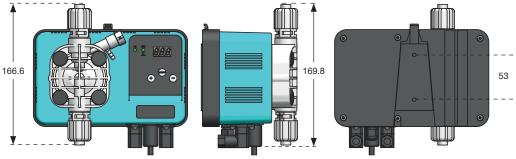

All dimensions are in mm.
All dimensions and weights are for guidance only.

Standard installation kit

- Injection valve
- · Foot filter
- Delivery tube 2 m PE 4x6
- Suction tube 2 m PVC 4x6
- Bleed tube 1.5 m PVC 4x6

Accessories

- Probes (ph)
- · Probe holders
- · Suction lances
- Mixers
- Tanks & bunds