

Verderdos

VE3-MF Multi-function solenoid metering pump



Description

Electromagnetic digital dosing and metering pump through water meter and with several function modes. Available as wall mounted pump.

Features

- Constant mode %
- Division impulse 1/n, 1xn (+memory)
- proportional to a 0/4-20 mA signal (programmable for the complete mA scale)
- PPM
- Overdose alarm, set by software
- Starting time delay setting
- LED programming and display
- PP body reinforced with fiber glass for better chemical resistance
- IP 65 protection
- Instant flow rate % visualization
- On/off switch
- Supplied with SCHUKO plug

Optional

- Level probe input

Materials

Material selection Pump head	Standard	Optional
Standard flow model	PVDF	PP
High flow model	PVDF	-
High pressure model	PVDF	-
Material		
Balls	Pyrex	Ceramic, PTFE, SS 316
Diaphragm	PTFE	-
Fittings	PVDF 1/2"	PP 1/2"
Seals	FPM	EPDM
Valve cartridges	PVDF 4 x 6	PP 4 x 6
Foot filter	PVDF 4 x 6 ball valve	PP 4 x 6 lip valve
Injection valve	PVDF 4 x 6 ball valve	PP 4 x 6 ball valve
Suction tube	PVC 4 x 6	PVDF
Delivery tube	PE 4 x 6	PVDF

	PTFE BALLS	SS 316 BALLS	PYREX BALLS	CERAMIC BALLS
Material	PTFE	SS 316	DURAN – PYREX	AL ² O ³
Hardness	60 (D)	1407160 HB	± 45 HRC	± 45 HRC
Specific weight	2.10 g/cm ³	8.02 g/cm ³	2.23 g/cm ³	3.90 g/cm ³
Description	Resistant to most of oxidizing chemicals, inorganic salt solutions, hydrocarbons. Non-conductive.	Spheres with resistance to corrosion caused by chemical solutions oxidants, organic chemicals, sterile solutions, mineral water and sea water, ammonia, salt air, etc.	Spheres with excellent chemical inertness to most acids. Excellent for use in metering pumps and valves in contact with strong oxidizing concentrations.	Resistant to most corrosive agents. Not recommended for use with hydrochloric acid and hydrofluoric acid solutions. Maximum abrasion resistance.

Technical data

	Flow max l/h	Pressure bar	Max cc	Max operating temp °C	Stroke mm	Solenoid ø mm	Body pump material	Power c Watt	Pulses ppm	Weight kg
Standard flow model										
10-02	10	2	1.11	65	1.3	80	PVDF	60	150	3.5
05-10	5	10	0.55	65	1.1	80	PVDF	60	150	3.5
04-12	4	12	0.44	65	0.9	80	PVDF	60	150	3.5
High flow model										
24-01	24	1	3.34	65	2.2	90	PVDF	60	150	4
22-02	22	2	2.89	65	2.2	90	PVDF	60	150	4
High pressure model										
03-15	3	15	0.33	65	1.3	80	PVDF	60	150	3.5
02-18	2	18	0.22	65	0.9	80	PVDF	60	150	3.5

Verderdos


VE3-MF Multi-function solenoid metering pump

VERDERDOS



Dimensions

(in mm)

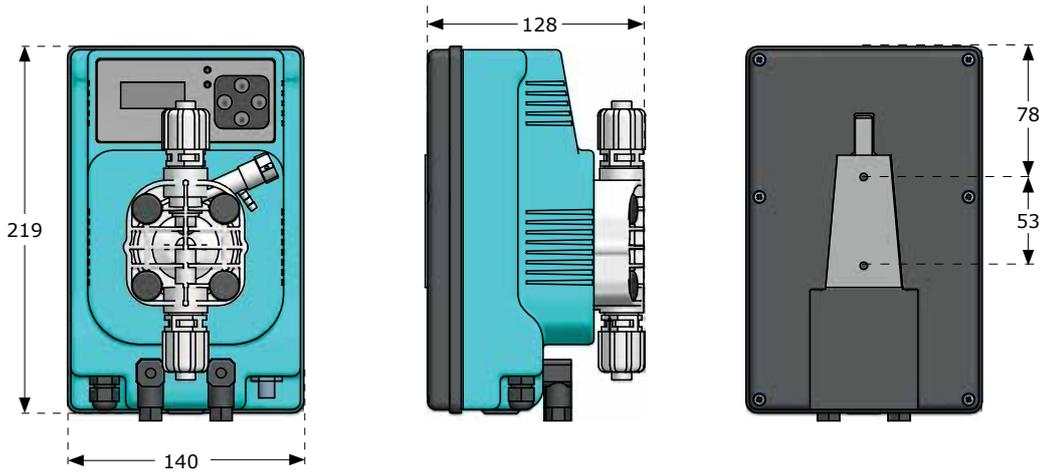

Standard installation kit

Injection valve	PVDF foot filter with ball valve	Delivery tube 2 m PE 4x6	Suction tube 2 m PVC 4x6	Bleed tube 1.5 m PVC 4x6
				

Accessories

- Probes (ph/Redox/Chlorine Cells)
- Probe holders
- Suction lances
- Mixers
- Tanks & bunds
- Water Meters

dos_VE3-MF_2015_rev1_UK-(uk)

Find your local supplier
at www.verderdos.com

For construction, installation and mounting drawings
please contact your local authorised Verderdos distributor.

VERDER
passion for pumps

