

# Verderdos

## VE1-C solenoid dosing pump



VERDERDOS

### Description

Digital solenoid pump with manual adjustable flow rate. Potential free, adjustable from 0 to 180 pulses per minute via touch controls. Easy to install and minimal maintenance required. Available as wall mounted pump or on foot.

### Your benefits

- Protection class IP 65
- PVDF pump head with EPDM or FKM seals
- ON / OFF switch
- Standard SCHUKO plug included

### Materials

Materials	Standard	Optional
Pump head	PVDF	PP
Balls	Pyrex	Ceramics, PTFE, SS 316
Diaphragm	PTFE	-
Fittings	PVDF 1/2"	PP 1/2"
Seals	FPM	EPDM
Valve cartridges	PVDF 4 x 6	PP 4 x 6
Foot filter	PVDF 4 x 6 ball valve	PP 4 x 6 lip valve
Injection valve	PVDF 4 x 6 ball valve	PP 4 x 6 ball valve
Suction tube	PVC 4 x 6	PVDF
Delivery tube	PE 4 x 6	PVDF

### Optional

- Level switch

Materials	Standard	Optional	
PTFE	SS 316	DURAN – PYREX	AL <sup>2</sup> O <sup>3</sup>
60 ( D )	1407160 HB	± 45 HRC	± 45 HRC
2.10 g/cm <sup>3</sup>	8.02 g/cm <sup>3</sup>	2.23 g/cm <sup>3</sup>	3.90 g/cm <sup>3</sup>
Resistant to most of oxidizing chemicals, inorganic salt solutions, hydrocarbons. Non-conductive.	Spheres with resistance to corrosion caused by chemical solutions oxidants, organic chemicals, sterile solutions, mineral water and sea water, ammonia, salt air, etc.	Spheres with excellent chemical inertness to most acids. Excellent for use in metering pumps and valves in contact with strong oxidizing concentrations.	Resistant to most corrosive agents. Not recommended for use with hydrochloric acid and hydrofluoric acid solutions. Maximum abrasion resistance.

# Verderdos

## VE1-C solenoid dosing pump




VERDERDOS

### Technical data

	Max l/h	Pressure bar	Max cc	Max operating temp °C	Stroke mm	Solenoid ø	pump head material	Power c Watt	Pulses ppm	Weight kg
1.5 - 12	1.5	12	0.14	65	0.9	80	PVDF	50	180	3.5
02 - 11	2	11	0.18	65	0.9	80	PVDF	50	180	3.5
04 - 09	4	9	0.37	65	0.9	80	PVDF	50	180	3.5
05 - 08	5	8	0.46	65	1.1	80	PVDF	50	180	3.5
07 - 05	7	5	0.65	65	1.1	80	PVDF	50	180	3.5
08 - 04	8	4	0.74	65	1.3	80	PVDF	50	180	3.5
10 - 02	10	2	0.92	65	1.3	80	PVDF	50	180	3.5
15 - 0.5	15	0.5	1.39	65	1.3	80	PVDF	50	180	3.5

### Performance curve

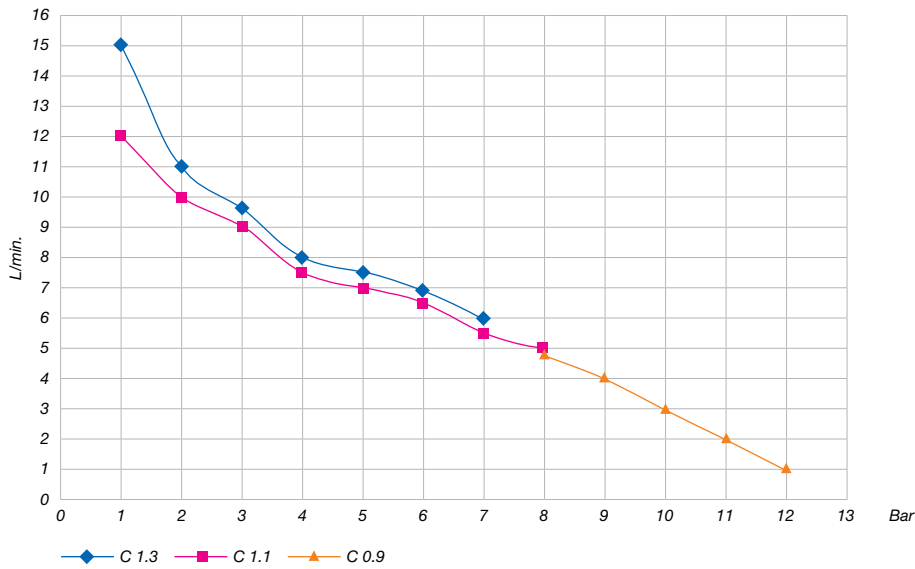

# Verderdos

## VE1-C solenoid dosing pump


VERDERDOS



### Installation example



### Dimensions (in mm)

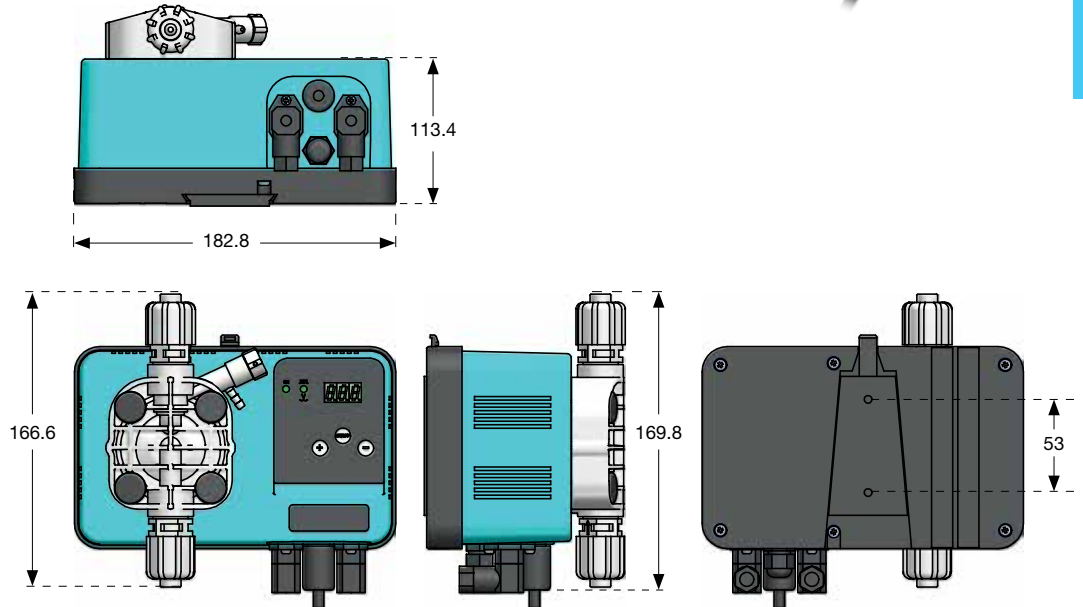

### Standard installation kit

Injection valve	PVDF foot filter with ball valve	Delivery tube 2 m PE 4x6	Suction tube 2 m PVC 4x6	Bleed tube 1.5 m PVC 4x6
				

### Accessories

- Probes (ph/Redox/Chlorine Cells)
- Probe holders
- Suction lances
- Mixers
- Tanks & bunds
- Water Meters

Find your local supplier at [www.verderdos.com](http://www.verderdos.com)

For construction, installation and floor mounting drawings please contact your local authorised Verderdos distributor.

**VERDER**  
passion for pumps

dos\_VE1-C\_2017\_rev2\_UK-(uk)

